

New style canopy installation for Shore Station

If your canopy frame utilizes the new puck system (fig. A) you will only need the bungee loops for the installation process. The metal canopy clips may be discarded.



Fig. A

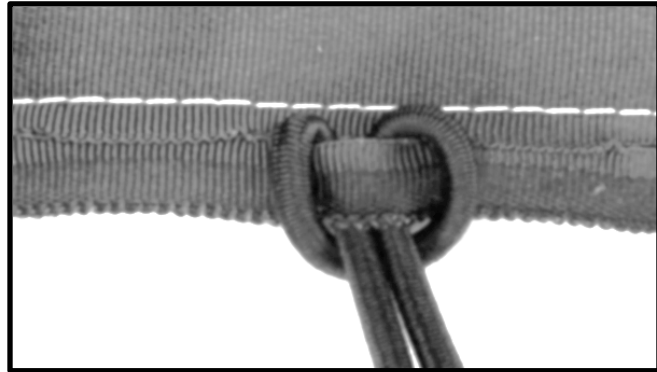


fig. B

Remove the cover from the box and place the bundle on the top of the canopy frame and unroll the replacement canopy down the length of the frame. When completely unrolled, unfold the cover across the top of the canopy ribs and position squarely on the frame. The black Quiklash webbing should now be on the inside and right behind or slightly above the aluminum canopy frame going lengthwise and square on the frame.


Attach a bungee loop through the quiklash webbing (fig. B) directly inline with each aluminum rib of the canopy frame.

Alternating from side to side, stretch the bungee loop under the round aluminum frame and up around the white puck on each rib. (Fig. A)

Use the 6 bungee hooks (three per end) in the same fashion by lacing through the quiklash webbing and stretching up to either holes or hooks on each corresponding rib on each end of the canopy. (Fig. C) Additional bungee loops may be used in the corners. (Fig. D)




(Fig. C)

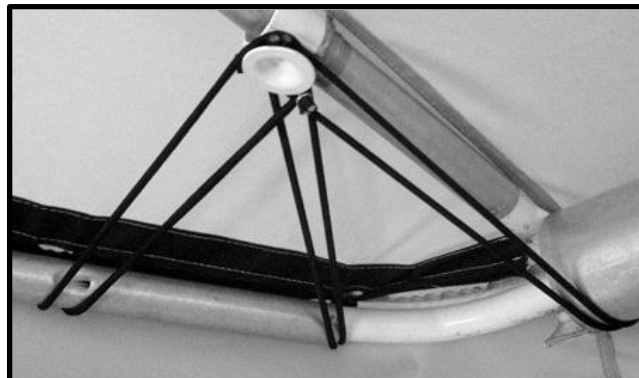

(Fig. D)

Old Style Canopy Installation for Shore Station.

If your canopy is the OLDER style that has spring hooks that stretch into holes on each rib, you will need to utilize the bungee loops and canopy clips. (fig A)

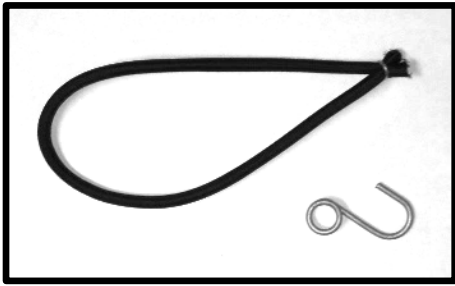

(Fig. A)




(Fig. B)

Remove the cover from the box and place the bundle on the top of the canopy frame and unroll the replacement canopy down the length of the frame. When completely unrolled, unfold the cover across the top of the canopy ribs and position squarely on the frame. The black Quiklash webbing should now be on the inside and right behind or slightly above the “round” aluminum canopy frame going lengthwise and positioned square on the frame. Attach a bungee loop through the quiklash webbing (fig. B) directly inline with each aluminum rib of the canopy frame,


Next install a canopy clip onto each loop by pulling the bungee loop through the spiraled end of the clip. (fig. C)

Alternating from side to side, stretch the bungee UNDER the round aluminum beam and hook into the hole in the rib.(fig. D)

Use the 6 bungee hooks (three per end) in the same fashion by lacing through the quiklash webbing and stretching up to either holes or hooks on each corresponding rib. (fig. E)

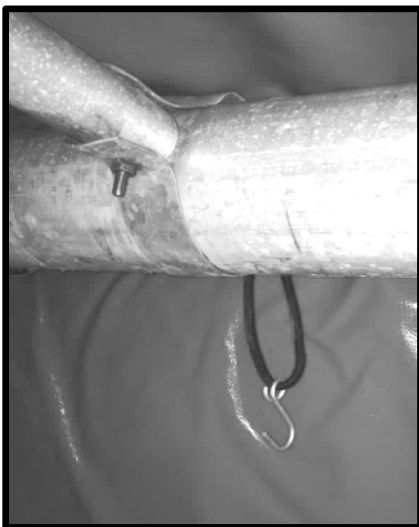

(Fig. C)

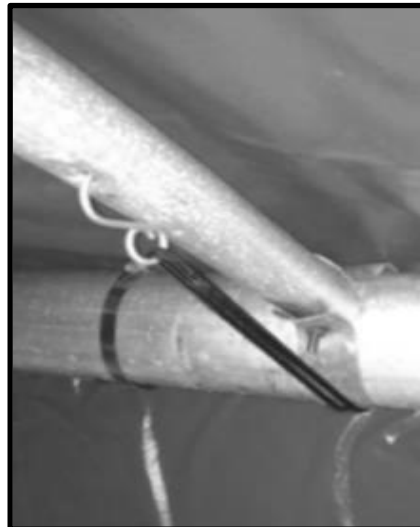

(Fig. D)



(Fig. E)